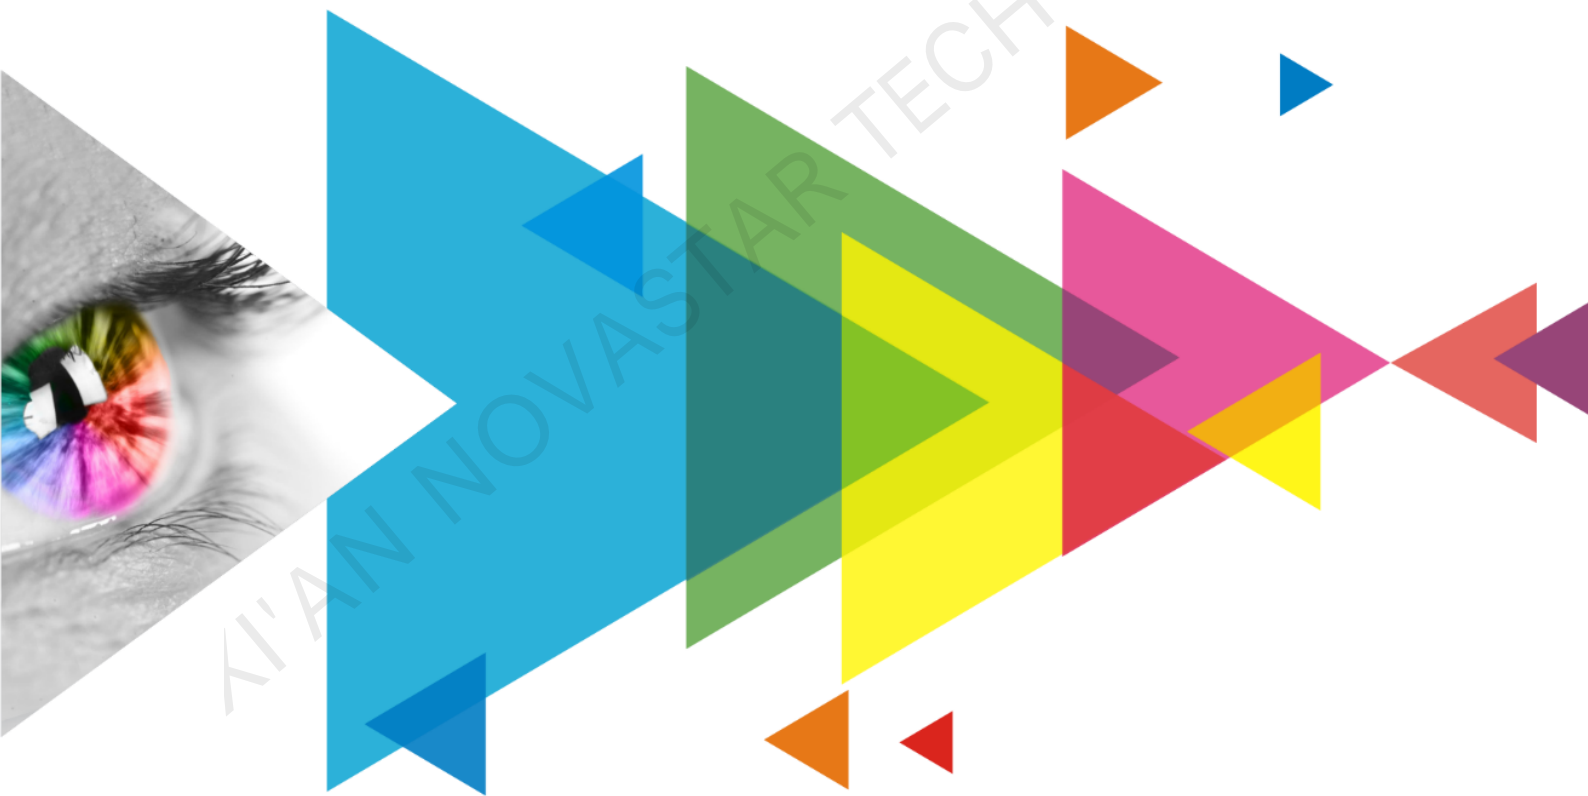


# MX30

## LED Display Controller



User Manual

## Change History

Document Version	Release Date	Description
V1.0.0	2023-02-09	First release

XI'AN NOVASTAR TECH CO., LTD

# Contents

Change History .....	i
Contents .....	ii
1 Overview .....	1
2 Appearance.....	2
2.1 Front Panel.....	2
2.2 Rear Panel .....	2
3 Applications.....	6
4 UI Introduction .....	7
4.1 Home Screen .....	7
4.2 Main Menu.....	9
5 Initial Screen Configuration.....	10
5.1 Quick Configuration via Front Panel Screen.....	10
5.1.1 Set Input Source .....	10
5.1.2 Load Cabinet Config File .....	11
5.1.3 Swift Layout .....	11
5.2 Free Screen Configuration via VMP .....	12
6 Display Effect Adjustment .....	13
6.1 Apply Presets .....	13
6.2 Set External Input Source Parameters .....	13
6.2.1 View Input Source Information.....	13
6.2.2 Set Resolution and Frame Rate (HDMI1, HDMI2 and DP only).....	13
6.2.3 Adjust Color .....	14
6.2.4 Set HDR Parameters (HDMI1 only).....	15
6.3 Set Internal Input Sources .....	15
6.4 Set Output Parameters.....	16
6.4.1 Adjust Screen Brightness.....	16
6.4.2 Adjust Gamma and Color Temperature.....	17
6.4.3 Set Low Latency .....	18
6.4.4 Set Bit Depth .....	18
6.4.5 Set Sync Source.....	18
6.5 Set Layers (All-In-One Controller Mode only) .....	19
7 Device Management.....	21
7.1 Switch Working Mode.....	21
7.2 Set a Backup Device .....	21
7.3 Configure Communication Settings .....	21
7.4 Enable Mapping .....	22
7.5 Control Display Status .....	23
7.6 Diagnostics.....	23
7.7 View the Firmware Version.....	24
7.8 Reset to Factory Settings .....	24
8 Basic System Settings .....	26
8.1 Set Language .....	26
8.2 Set Session Timeout.....	26
8.3 Set Temperature Scale.....	26
8.4 View Service Information.....	27
9 Product Specifications .....	28
10 Video Source Specifications .....	29
11 Ethernet Port Load Capacity .....	30

# 1 Overview

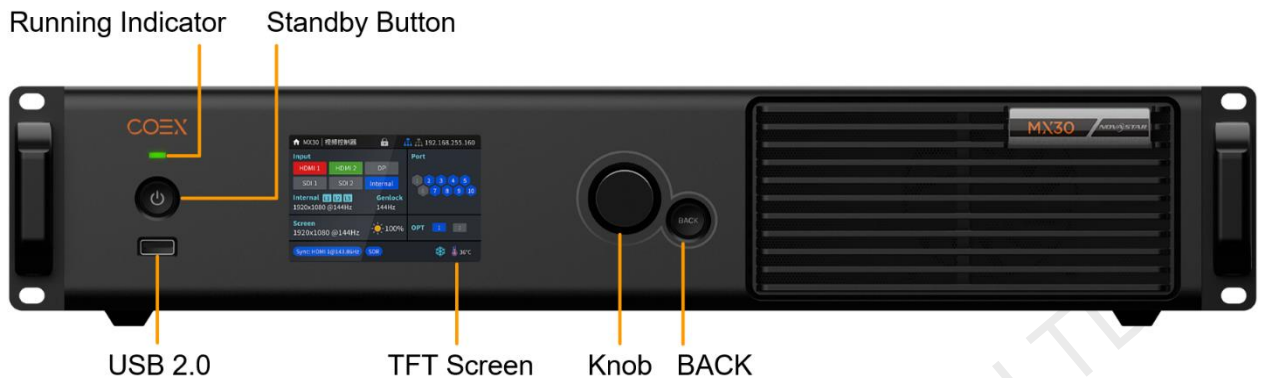
The MX30 is an all-in-one LED display controller in the brand-new control system COEX series of Xi'an NovaStar Tech Co., Ltd. (hereinafter referred to as NovaStar). This controller integrates video processing and video control into one box and offers rich video input connectors (HDMI 2.0, HDMI 1.4, DP 1.1 and 3G-SDI), 10x Ethernet output ports and 2x 10G optical ports. It can also work with the brand-new software VMP (Vision Management Platform) to provide a better operation and control experience.

This document mainly describes the menu operations on the LCD screen of the controller. For more function operations, see the *VMP Vision Management Platform User Manual*.

XI'AN NOVASTAR TECH CO., LTD.

## 2 Appearance

### 2.1 Front Panel



Name	Description
Running Indicator	<ul style="list-style-type: none"> <li>• Solid red: Standby</li> <li>• Solid blue: The device is being started.</li> <li>• Solid green: The device is running normally.</li> <li>• Flashing red: The device is running abnormally.</li> </ul>
Standby Button	<ul style="list-style-type: none"> <li>• Press the button to power on or power off the device.</li> <li>• Hold down the button for 5s or longer to restart the device.</li> </ul>
USB 2.0	<ul style="list-style-type: none"> <li>• Connect to a USB drive only to export the device diagnostic result.</li> <li>• Only the NTFS and FAT32 file systems are supported. Others are not supported.</li> </ul>
TFT Screen	A 3.5-inch screen to display the device status, menus, submenus and messages for parameter settings
Knob	<ul style="list-style-type: none"> <li>• On the home screen, press the knob to enter the main menu screen.</li> <li>• On the main menu screen, rotate the knob to select a menu item or adjust the parameter value. Press the knob to confirm the operation.</li> <li>• Hold down the knob and <b>BACK</b> button simultaneously for 5s or longer to lock or unlock the buttons.</li> </ul>
BACK	Go back to the previous menu or cancel the current operation.

### 2.2 Rear Panel



Inputs			
Type	Qty	Description	
HDMI 2.0-1 IN	1	Resolutions	Max resolution: 4096x2160@60Hz (Forced) Min resolution: 800x600@60Hz
		Max width/height (Forced)	Max width: 8192 pixels (8192x1080@60Hz) Max height: 7680 pixels (1080x7680@60Hz)
		Frame rates	23.98 / 24 / 25 / 29.97 / 30 / 47.95 / 48 / 50 / 59.94 / 60 / 72 / 75 / 85 / 100 / 119.88 / 120 / 143.86 / 144 / 240 Hz
		HDR	Support HDR10 and comply with the SMPTE ST 2084 and SMPTE ST 2086 standards. Support HLG.
		EDID management	Support standard resolutions, up to 3840x2160@60Hz. Support custom input resolutions.
		HDCP	HDCP 2.2 compliant, backwards compatible
		Interlaced signal inputs	Not supported
HDMI 1.4-2 IN	1	Resolutions	Max resolution: 4096x1080@60Hz (Forced) Min resolution: 800x600@60Hz
		Max width/height (Forced)	Max width: 4096 pixels (4096x1080@60Hz) Max height: 4096 pixels (1080x4096@60Hz)
		Frame rates	23.98 / 24 / 25 / 29.97 / 30 / 47.95 / 48 / 50 / 59.94 / 60 / 72 / 75 / 85 / 100 / 119.88 / 120 / 143.86 / 144 / 240 Hz
		EDID management	Support standard resolutions, up to 3840x1080@60Hz. Support custom input resolutions.
		HDCP	HDCP 2.2 compliant, backwards compatible
		Interlaced signal inputs	Not supported
DP 1.1	1	Resolutions	Max resolution: 4096x1080@60Hz (Forced) Min resolution: 800x600@60Hz
		Max width/height (Forced)	Max width: 4096 pixels (4096x1080@60Hz) Max height: 4096 pixels (1080x4096@60Hz)
		Frame rates	23.98 / 24 / 25 / 29.97 / 30 / 47.95 / 48 / 50 / 59.94 / 60 / 72 / 75 / 85 / 100 / 119.88 / 120 / 143.86 / 144 / 240 Hz
		EDID management	Support standard resolutions, up to 3840x1080@60Hz. Support custom input resolutions.
		HDCP	HDCP 2.2 compliant, backwards compatible
		Interlaced signal inputs	Not supported

3G-SDI IN	2	Standards	Support ST-424 (3G), ST-292 (HD) and ST-259 (SD) standard video inputs. Support 3G-Level A/Level B (DS mode).
		Resolutions	Max resolution: 1920×1080@60Hz
		Frame rates	23.98 Hz to 60.00 Hz
		Interlaced signal inputs	Support MQ level deinterlacing. The interlaced signals will be automatically detected and converted to progressive signals.
<b>Outputs</b>			
Type	Qty	Description	
1–10	10	Gigabit Ethernet output ports. Support hot backup between Ethernet ports. <ul style="list-style-type: none"> <li>• Max device load capacity: 6.5 million pixels</li> <li>• The maximum load capacity per Ethernet port is as follows. For details, see <a href="#">11 Ethernet Port Load Capacity</a>.               <ul style="list-style-type: none"> <li>– 8bit@60Hz: 659,722 pixels</li> <li>– 10bit@60Hz: 329,861 pixels. When the controller works with the A10s Pro receiving card, the capacity can be up to 494,791 pixels.</li> </ul> </li> </ul>	
OPT 1–2	2	10G optical output ports <ul style="list-style-type: none"> <li>• OPT 1 transmits the data of Ethernet ports 1 to 10.</li> <li>• OPT 2 is the copy channel of OPT 1.</li> </ul>	
HDMI 2.0-1 LOOP	1	HDMI loop through. Up to 8 devices can be cabled in one loop.	
HDMI 1.4-2 LOOP	1		
3G-SDI LOOP	2	SDI loop through. Up to 8 devices can be cabled in one loop.	
SPDIF OUT	1	A digital audio output (Reserved)	
<b>Controls</b>			
Type	Qty	Description	
ETHERNET	2	Gigabit Ethernet control ports. Support TCP/IP protocol and star topology. They have the same functions without priority and order, and can be connected to VMP software. No switch or router is needed to deploy multiple devices on the same LAN via device cascading as the network switching function is already built in. Up to 20 MX30 devices can be cascaded.	
GENLOCK	1	A pair of Genlock signal connectors. Support Bi-Level and Tri-Level. <ul style="list-style-type: none"> <li>• IN: Accept the sync signal.</li> <li>• LOOP: Loop the sync signal.</li> </ul> For standard Genlock signal generators, up to 20 MX30 devices can be cascaded.	
AUX	1	An auxiliary port that connects to the central control device (RS232) (Reserved)	
<b>Power</b>			
100-240V~, 50/60Hz, 2-0.8A	1	An AC power input connector and switch	

---

 **Note**

The maximum input resolution and maximum width and height of HDMI and DP connectors must be obtained by setting the graphics card.

---

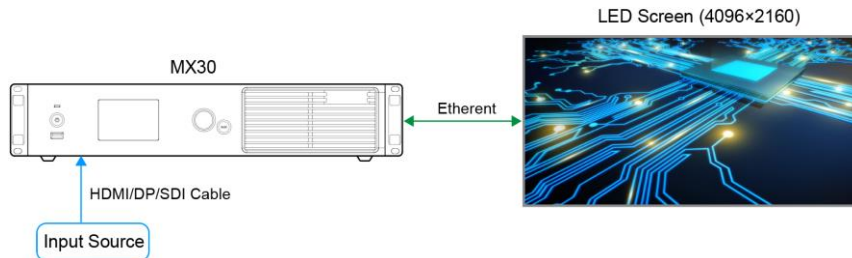
XI'AN NOVASTAR TECH CO., LTD




### 3 Applications

The MX30 has two typical application scenarios as shown below. In those application examples, the LED screen size is 4096x2160.

#### Application 1: Synchronous Mosaic



#### Application 2: Long-Distance Transmission via OPT Ports

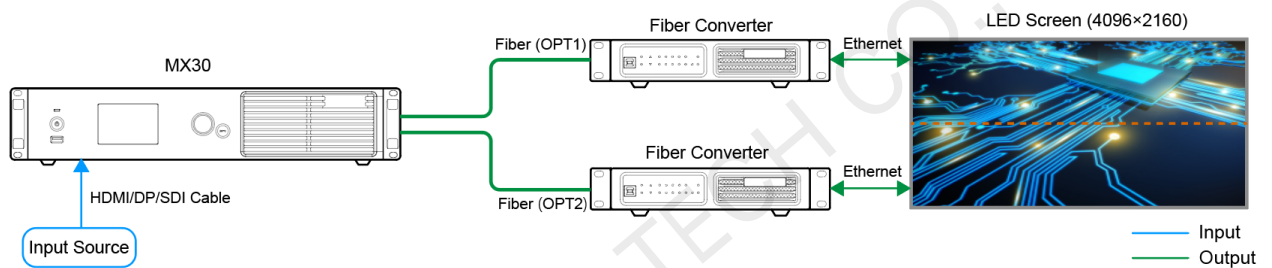


## 4 UI Introduction

### 4.1 Home Screen

After the device is powered on, the home screen showing device related information is displayed as follows.



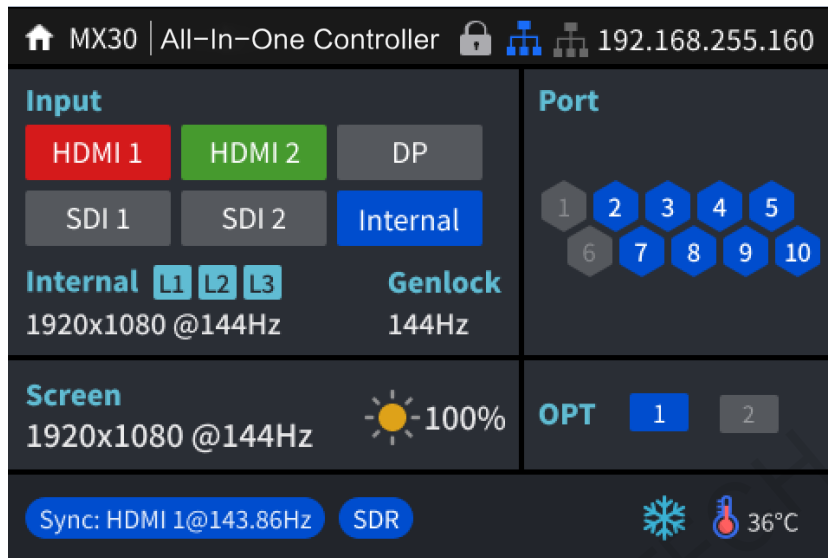


Figure 4-1 Home screen



The home screen shown in [Figure 4-1](#) is described in [Table 4-1](#).

Table 4-1 Home screen descriptions


Area	Content	Description
Top line	MX30	The device name The name can be changed in VMP software.
	All-In-Once Controller	The device working mode <ul style="list-style-type: none"> <li>All-In-One Controller: The video processing and sending functions are available.</li> <li>Send-Only Controller: Only the video sending function is available.</li> </ul> For related operations, please refer to <a href="#">7.1 Switch Working Mode</a> .
		The device button lock status <ul style="list-style-type: none"> <li>When the icon displayed: The buttons are locked.</li> <li>When the icon not displayed: The buttons are unlocked.</li> </ul> Hold down the knob and <b>BACK</b> button simultaneously for 5s or longer to lock or unlock the buttons.
		The connection status of the Ethernet ports <ul style="list-style-type: none"> <li>Blue: Connected</li> <li>Gray: Disconnected</li> </ul>
	192.168.255.160	The device IP address For related operations, please refer to <a href="#">7.3 Configure Communication Settings</a> .

Area	Content	Description
Input	HDMI1, HDMI2, DP, SDI1, SDI2, Internal	<p>The device input source type and status</p> <ul style="list-style-type: none"> <li>• Green: The signal is accessed normally and used.</li> <li>• Blue: The signal is accessed normally, but not used.</li> <li>• Red: The signal is abnormal.</li> <li>• Gray: The signal is abnormal and not used.</li> </ul> <p>For related operations in the Send-Only Controller working mode, please refer to <a href="#">5.1.1 Set Input Source</a>.</p>
	Internal 1920×1080@144Hz	<p>The resolution and frame rate of the currently available input source</p> <p>If multiple input sources are available, the resolution and frame rate of each input source will be displayed one by one. If the input is used by the layer, the layer number will be displayed below.</p> <p>For related operations, please refer to <a href="#">6.2.2 Set Resolution and Frame Rate (HDMI1, HDMI2 and DP only)</a>.</p>
Screen	1920×1080@144.00Hz	The screen resolution and frame rate
		<p>The screen brightness</p> <p>For related operations, please refer to <a href="#">6.4.1 Adjust Screen Brightness</a>.</p>
Port	1–10	<p>The statuses of the Ethernet ports</p> <ul style="list-style-type: none"> <li>• Blue: Connected</li> <li>• Gray: Disconnected</li> </ul>
OPT	1–2	<p>The statuses of the OPT ports</p> <ul style="list-style-type: none"> <li>• Blue: Connected</li> <li>• Gray: Disconnected</li> </ul>
Bottom line	Sync:HDMI@143.86Hz	<p>The sync signal currently used and the signal status</p> <ul style="list-style-type: none"> <li>• Sync: Active Input: Sync with the frame rate of the current input source</li> <li>• Sync: Genlock: Sync with the frame rate of the Genlock signal</li> <li>• Sync: Internal: Sync with the frame rate of the internal clock of the device</li> </ul> <p>Color code:</p> <ul style="list-style-type: none"> <li>• Blue: The signal is normal.</li> <li>• Red: The signal is abnormal.</li> </ul> <p>For related operations, please refer to <a href="#">6.4.5 Set Sync Source</a>.</p>
	SDR	<p>The format of the dynamic range</p> <p>For-related operations, please refer to <a href="#">6.2.4 Set HDR Parameters (HDMI1 only)</a>.</p>
		<p>The output display status.</p> <p>For related operations, please refer to <a href="#">7.5 Control Display Status</a>.</p> <ul style="list-style-type: none"> <li>• : The display is frozen.</li> <li>• : The display is blacked out</li> <li>• When no icon is displayed, the display is normal</li> </ul>
		The temperature inside the chassis

## 4.2 Main Menu

On the home screen, press the knob to enter the main menu screen. When the device working mode is All-In-One Controller, the main menu is shown in [Figure 4-2](#). When the device working mode is Send-Only Controller, the **Layer Settings** menu is not displayed.

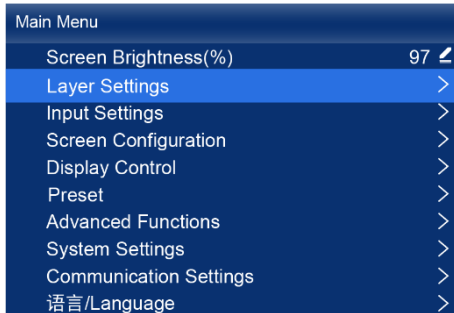Figure 4-2 Main menu



## 5 Initial Screen Configuration

If the LED screen, cabinets, data flow and the number of cabinets loaded by Ethernet ports can meet the following requirements, you can configure the screen via the device front panel menu; otherwise, screen configuration in VMP will be your ideal choice.

- Screen: The LED screen must be a regular screen.
- Cabinet: The cabinets must be regular ones of the same size, and function well.
- Data flow: The data must run in the same way for all Ethernet ports and the data flow must be one of the followings. The starting position of the data flow is the first cabinet of Ethernet port 1, and the connections are made in sequence according to the serial number of the Ethernet port.



- Number of cabinets loaded by Ethernet ports: If  $n$  ports are used to load the cabinets, the number of cabinets loaded by each of the first  $(n-1)$  ports must be the same and the integral multiple of the number of cabinet rows or columns, and it must be greater than or equal to the number of cabinets loaded by the last port.

### 5.1 Quick Configuration via Front Panel Screen

#### 5.1.1 Set Input Source


Select the desired input source and complete the related settings, such as resolution and frame rate. If the resolutions of the input source and screen are the same, the image can be displayed pixel to pixel. A lower frame rate may result in image flickering, while a higher frame rate helps stabilize the display image.

#### Note

Input source settings are required for screen configuration in the Send-Only Controller working mode and not required in the All-In-One Controller mode.


Step 1 On the main menu screen, choose **Input Settings** > **Select Input** to select a video source.

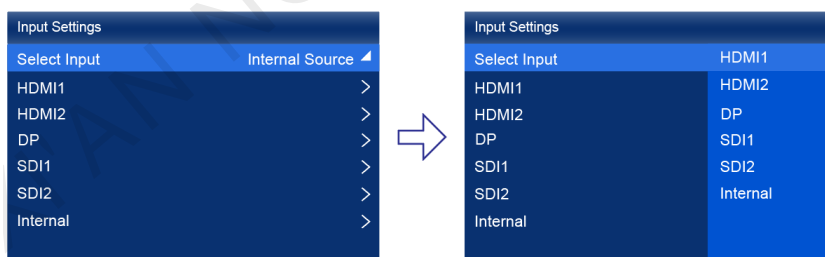Figure 5-1 Select input source




Step 2 Perform the corresponding operations for the input source according to the input source type. For the SDI sources, please skip this step.

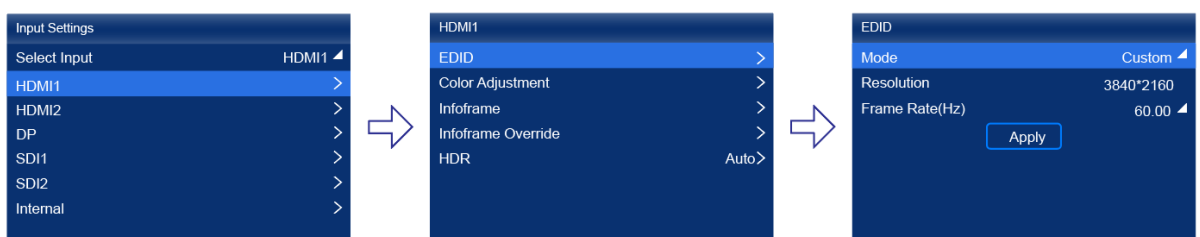- External input sources (HDMI1, HDMI2, DP)



- a. Choose *input source* > EDID. The *input source* is HDMI1, HDMI2, or DP.
- b. Set **Mode** to **Custom** or **Standard**, and then set the resolution and frame rate.
  - Custom: Set the resolution manually.
  - Standard: Select the desired resolution from the drop-down options.
- c. After the settings are done, click **Apply**.

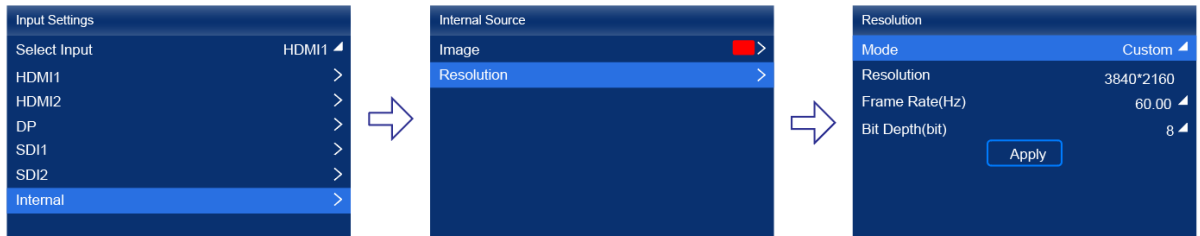- Internal sources



- a. Choose **Internal** > **Image**, and then select a static picture or a motion picture.
- b. When the relevant parameters of the image are displayed, set the parameters according to your actual needs; otherwise, please skip this step.
- c. Press the **BACK** button to go back to the upper-level menu and select **Resolution**.
- d. Set **Mode** to **Custom** or **Standard**, and then set the resolution and frame rate.
- e. After the settings are done, click **Apply**.

### 5.1.2 Load Cabinet Config File

When the cabinet cannot display images normally, send the cabinet configuration file (.rcfgx) to the cabinet and save it to let the cabinet display image normally. Before the operation, please import cabinet configuration file with VMP, or store the cabinet configuration file in the root directory of the USB drive and insert the USB drive into the USB port on the device front panel.

- Step 1 On the main menu screen, choose **Screen Configuration** > **Send Cabinet Config File**.

Figure 5-2 Send cabinet config file



- Step 2 Select the target configuration file.
- Step 3 Select **Yes** in the displayed dialog box.

After the configuration file is successfully sent, a message appears on the menu screen and then then you will automatically return to configuration file screen.

- Step 4 Press the **BACK** button to go back to the upper-level menu.
- Step 5 Select **Save to RV Card**.
- Step 6 Select **Yes** in the displayed dialog box.


After the configuration file is successfully saved, a message appears on the menu screen.

### 5.1.3 Swift Layout

Set the screen configuration parameters to quickly complete the cabinet connection, so that the LED screen can display the input source image normally.

Step 1 On the main menu screen, choose **Screen Configuration > Swift Layout**.

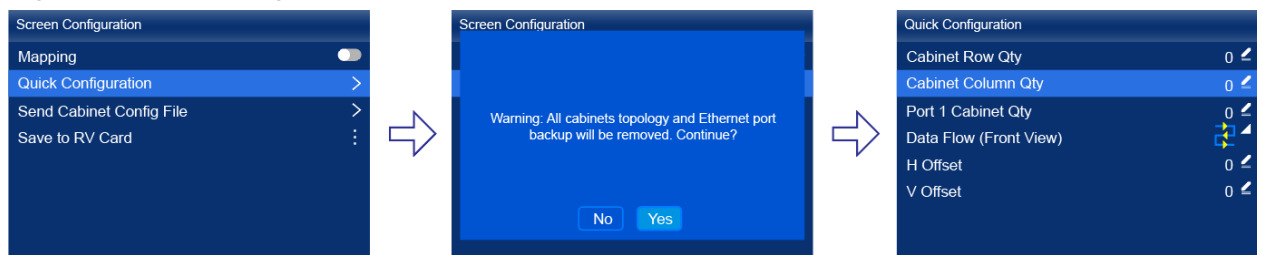Figure 5-3 Quick configuration



Step 2 Select **Yes** in the displayed dialog box.

Step 3 Set screen configuration parameters as required.

- Cabinet Row Qty: Set the quantity of cabinet rows.
- Cabinet Column Qty: Set the quantity of cabinet columns.
- Port 1 Cabinet Qty: Set the quantity of the cabinets loaded by Ethernet port 1.
- Data Flow (Front View): Select the data flow for the cabinets loaded by Ethernet port 1.
- H Offset: Set the horizontal offset of the displayed image.
- V Offset: Set the vertical offset of the displayed image.

## 5.2 Free Screen Configuration via VMP

The VMP software can be used to configure either the regular screens or complex screens, and supports free wiring of the cabinets, plus the ability of calculating the used load capacity according to the cabinets that are actually loaded. For the details of performing the free screen configuration, please refer to *VMP Vision Management Platform User Manual*.

## 6 Display Effect Adjustment


### 6.1 Apply Presets

Apply a saved preset in VMP to the device to quickly complete display effect adjustment.

Step 1 On the main menu screen, select **Preset**.

The saved presets in VMP is displayed on the menu screen, as shown in [Figure 6-1](#).

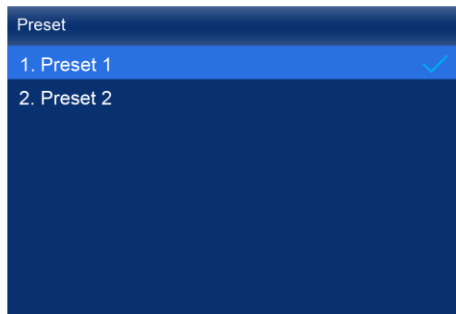Figure 6-1 Presets



Step 2 Select a preset.


### 6.2 Set External Input Source Parameters

#### 6.2.1 View Input Source Information

View the attribute values of the external input source, including the resolution, frame rate, bit depth, color gamut, etc.

Step 1 On the main menu screen, choose **Input Settings** > *input source* > **Infoframe**. The *input source* is HDMI1, HDMI2, DP, SDI1, or SDI2.

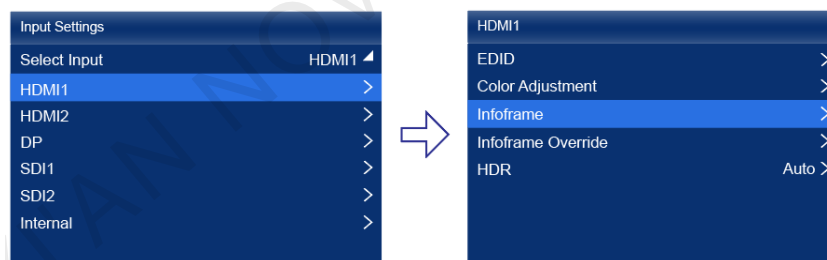Figure 6-2 Input source information



When the device working mode is All-In-One Controller, the **Select Input** menu is not displayed.

Step 2 View the input source information.


#### 6.2.2 Set Resolution and Frame Rate (HDMI1, HDMI2 and DP only)

Set the resolution and frame rate of the external input source. If the resolutions of the input source and screen are the same, the image can be displayed pixel to pixel. A lower frame rate may result in image flickering, while a higher frame rate helps stabilize the display image.

Step 1 On the main menu screen, choose **Input Settings** > *input source* > **EDID**. The *input source* is HDMI1, HDMI2, or DP.



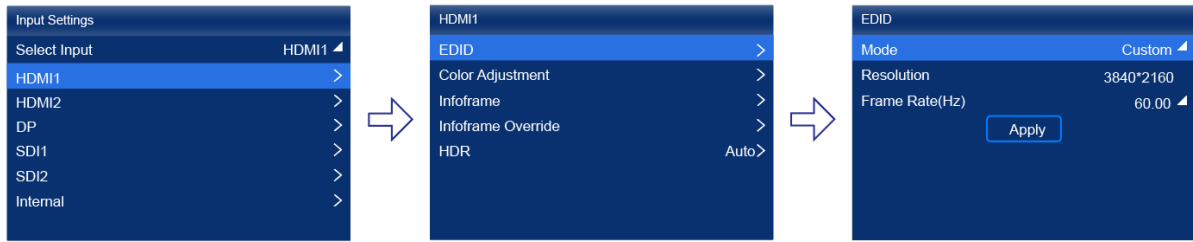Figure 6-3 EDID



When the device working mode is All-In-One Controller, the **Select Input** menu is not displayed.

Step 2 Set **Mode** to **Custom** or **Standard**, and then set the resolution and frame rate.

- Custom: Set the resolution manually.
- Standard: Select the desired resolution from the drop-down options.


Step 3 After the settings are done, click **Apply**.

### 6.2.3 Adjust Color

Set the inframe override parameters of the external input source and adjust the color. The override parameter will be used in the calculation of color adjustment. If the value of this parameter is not set manually, the value that comes with the input source will be used.

Step 1 On the main menu screen, choose **Input Settings** > *input source* > **Infotrame Override**. The *input source* is HDMI1, HDMI2, DP, SDI1 or SDI2.

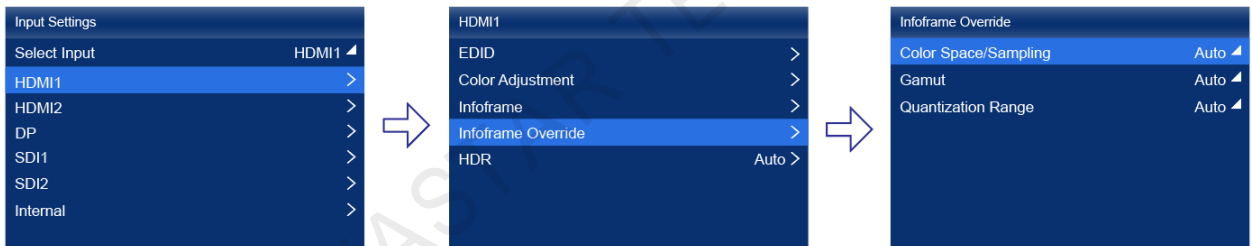Figure 6-4 Infotrame override



When the device working mode is All-In-One Controller, the **Select Input** menu is not displayed.

Step 2 Set the override parameters as required.

Select **Auto** and the device will read the attribute value that comes with the input source.

Step 3 Press the **BACK** button to go back to the upper-level menu.

Step 4 Select **Color Adjustment**.

Step 5 Set the related parameters.

Parameter	Description
Black Level	It is used to adjust the brightness of the dark areas of the image. The smaller the value, the darker the dark part of the screen.
Contrast	It is used to adjust the brightness of the highlight areas of the image. The greater the value, the brighter the highlight part of the screen. Contrast and black level together affect the overall contrast of the image.
Saturation	It is used to adjust the color purity of the image. The greater the value, the more vivid the color.
Hue	It is used to adjust the color effect of the displayed image color.


Parameter	Description
Red Shadow/Green Shadow/Blue Shadow	It is used to adjust the brightness of the dark areas of the image. The principle is the same as that of black level, but only the RGB components are adjusted.
Red Highlight/Green Highlight/Blue Highlight	It is used to adjust the brightness of the highlight areas of the image. The principle is the same as that of contrast, but only the RGB components are adjusted.

### 6.2.4 Set HDR Parameters (HDMI1 only)

Set the parameters used during the process of parsing HDR video sources.

Step 1 On the main menu screen, choose **Input Settings > HDMI1 > HDR**.

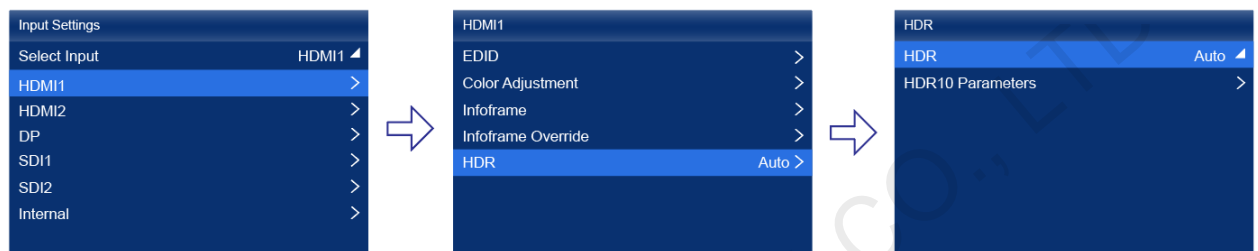Figure 6-5 HDR



When the device working mode is All-In-One Controller, the **Select Input** menu is not displayed.

Step 2 Select **HDR** and select the HDR format from the listed options.

Select **Auto** and the device will read the attribute value that comes with the input source.

Step 3 Select **HDR10 Parameters** to complete the related settings. If the HDR format is SDR here, no parameters need to be set.

HDR-related parameters include:

- PQ mode: The mapping method of video source brightness.
  - ST2084 (PQ): This mode 1:1 maps the brightness of the video source. The part that exceeds the maximum screen brightness will still be adjusted to the maximum screen brightness.
  - ST2086 (Linear mapping): This mode linearly maps the brightness of the video source. It globally adjusts the video source brightness according to the maximum screen brightness to ensure that the ratio of the brightness of the entire source content remains unchanged.
- MaxCLL Override: When the **MaxCLL Override** switch is , the **MaxCLL** parameter takes effect.
- MaxCLL: Override the maximum video source brightness and adjust the brightness to a specified value.

To restore the parameters to the defaults, select **Reset**.

#### Note


Using the HDR function reduces the MX30 load capacity by less than half if the MX30o works with the A10s Pro receiving card. For details, see [11 Ethernet Port Load Capacity](#).

## 6.3 Set Internal Input Sources

Select the internal source stored in the device and set the related parameters for screen testing and troubleshooting.

Step 1 On the main menu screen, choose **Input Settings > Internal > Image**.

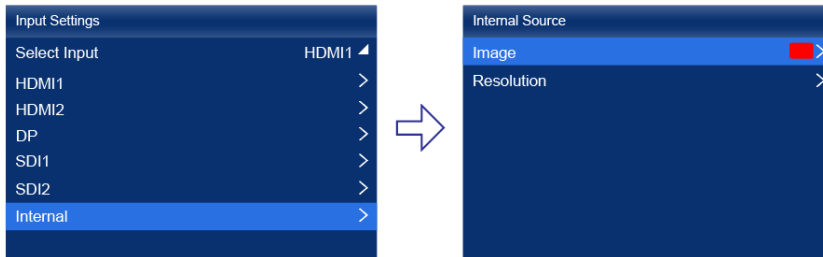
Figure 6-6 Internal source



When the device working mode is All-In-One Controller, the **Select Input** menu is not displayed.

- Step 2 Select a static picture or a motion picture.
- Step 3 When the relevant parameters of the image are displayed, set the parameters according to your actual needs; otherwise, please skip this step.
- Step 4 Press the **BACK** button to go back to the upper-level menu and select **Resolution**.
- Step 5 Set **Mode** to **Custom** or **Standard**, and then set the resolution, frame rate and bit depth.

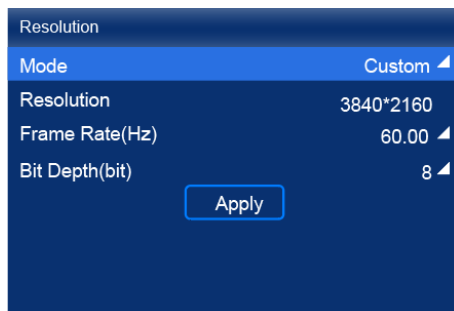Figure 6-7 Resolution parameters



- Custom: Set the resolution manually.
- Standard: Select the desired resolution from the drop-down options.

- Step 6 After the settings are done, click **Apply**.


## 6.4 Set Output Parameters

### 6.4.1 Adjust Screen Brightness

Adjust and save the screen brightness.


- Step 1 On the main menu screen, select **Screen Brightness** and press the knob to let the brightness value become editable.

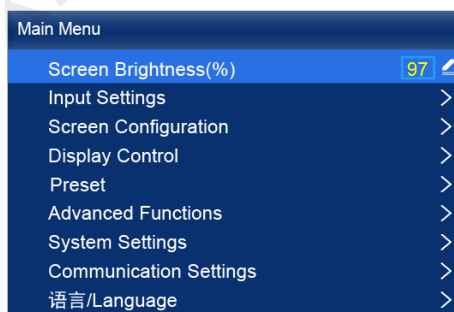Figure 6-8 Screen brightness (the Send-Only Controller mode as example)



- Step 2 Rotate the knob to adjust the brightness to the target value, and then press the knob to confirm.
- Step 3 Choose **Screen Configuration** > **Save to RV Card**.

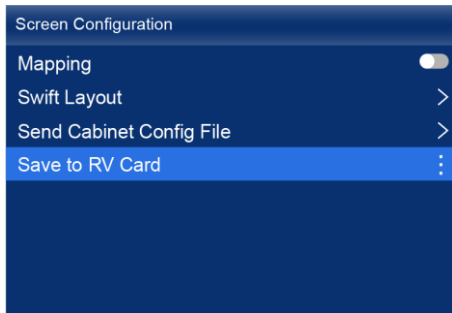Figure 6-9 Save to RV card



Step 4 Select **Yes** in the displayed dialog box.


After the brightness value is successfully saved, a message appears on the menu screen.

## 6.4.2 Adjust Gamma and Color Temperature

Adjust and save the Gamma and color temperature.

Step 1 On the main menu screen, choose **Advanced Functions** > **LED Screen Color**.

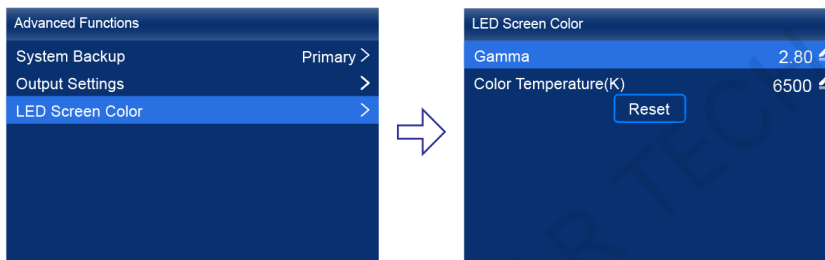Figure 6-10 LED screen color



Step 2 Adjust the Gamma value.


1. Select **Gamma** and press the knob to let the value become editable.
2. Rotate the knob to adjust the Gamma to the target value, and then press the knob to confirm.

Step 3 Adjust the color temperature value.

1. Select **Color Temperature** and press the knob to let the value become editable.
  2. Rotate the knob to adjust the temperature to the target value, and then press the knob to confirm.
- If you want to restore the parameters to the defaults, select **Reset**.

Step 4 Press the **BACK** button to go back to the main menu, and then choose **Screen Configuration** > **Save to RV Card**.

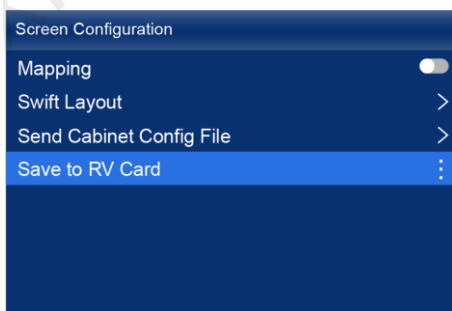Figure 6-11 Save to RV card



Step 5 Select **Yes** in the displayed dialog box.


After the values are successfully saved, a message appears on the menu screen.

### 6.4.3 Set Low Latency


The low latency function is used to reduce the delay at the controller, or increase the latency when the device works with high-latency equipment.

Step 1 On the main menu screen, choose **Advanced Functions > Output Settings**.

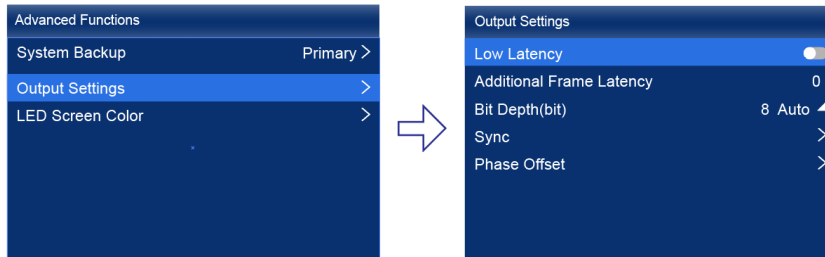Figure 6-12 Low latency



Step 2 Perform any of the following operations as required.

- Enable low latency  
Set the **Low Latency** switch to  to enable the low latency function.
- Set additional frame latency
  - a. Select **Additional Frame Latency** and press the knob to let the value become editable.
  - b. Rotate the knob to adjust the parameter to the target value, and then press the knob to confirm.

#### Note


- The latency at the controller is 0 frame (less than 1 ms) in Send-Only Controller working mode and 1 frame in All-In-One Controller working mode.
- To enable the low latency function, the sync source must be the active input source.

### 6.4.4 Set Bit Depth

Set the output bit depth of the input source.

Step 1 On the main menu screen, choose **Advanced Functions > Output Settings**.

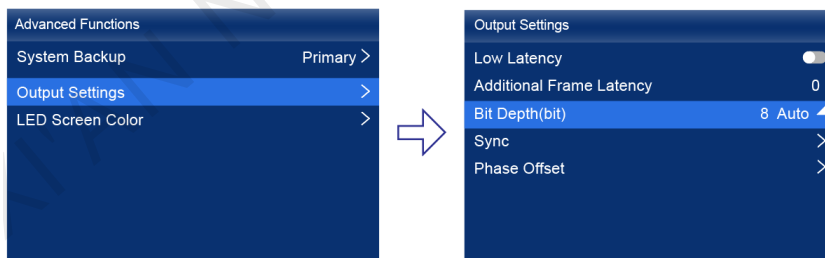Figure 6-13 Bit depth



Step 2 Select **Bit Depth** and then select the desired bit depth value from the drop-down options.


If **Auto** is selected, the output bit depth is the same as the input bit depth.

### 6.4.5 Set Sync Source

Select a synchronization signal for the display frame rate and set the phase offset.

Step 1 On the main menu screen, choose **Advanced Functions > Output Settings > Sync**.

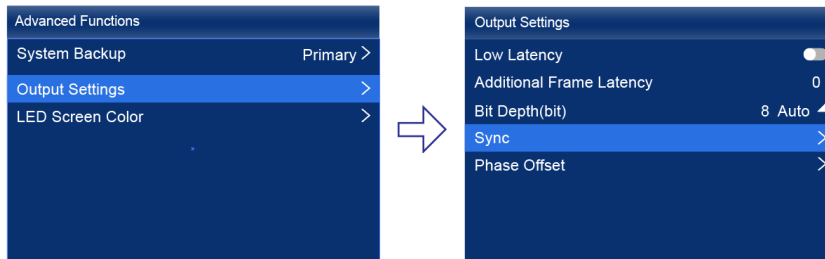Figure 6-14 Sync



Step 2 Select **Sync Source** and then select the desired sync source from the drop-down options.

- Active Source: Sync with the frame rate of the active source.
- Genlock: Sync with the frame rate of the Genlock signal.
- Internal: Sync with the frame rate of the controller's internal clock. When this option is selected, a related parameter **Frame Rate** is displayed. You can select a value from its drop-down options.

Step 3 Press the **BACK** button to go back to the upper level menu.

Step 4 Select **Phase Offset**.

Step 5 Choose **Adjustment Mode** and then select the desired mode from the drop-down options.


- Off: Turn off the phase offset function.
- Angle: The related parameter **Angle** can be set.
- Fraction: The related parameter **Fraction** can be set.
- Absolute: The related parameters **Lines** and **Pixels** can be set when the sync source is **Active Source**.

## 6.5 Set Layers (All-In-One Controller Mode only)

When the device working mode is All-In-One Controller, set the canvas size and the layers (up to 3) on the canvas.

Step 1 On the main menu screen, select **Layer Settings**.

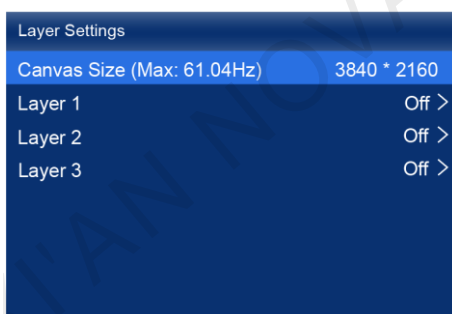Figure 6-15 Layer settings



Step 2 Select **Canvas Size** to enable the value editing status. Rotate the knob to change the value and press the knob to confirm the value.

Step 3 Select a layer and set the related parameters.

- Status: Turn on or off the layer.
- Input Source: Select an input source.  
On the home screen, the number of the layer that is using this input source is displayed in the input source information area.
- Scaling Mode: Set the scaling mode.
  - Custom: Customize the width and height.
  - Pixel to Pixel: Same as the width and height of the input source

- Snap to Canvas: Same as the width and height of the canvas
- Fill Screen: Same as the width and height of the screen
- Width: Set the layer width.
- Height: Set the layer height.
- H Position: Set the horizontal coordinate (X) of the layer on the canvas.
- V Position: Set the vertical coordinate (Y) of the layer on the canvas.
- Priority: Set the Z coordinate of the layer on the canvas. The greater the value, the higher priority.
- Crop: Turn on or off input crop and set the crop size and position.
- Border: Turn on or off layer border and set the border thickness and color.

Step 4 If necessary, select other layers and set the related parameters.

XI'AN NOVASTAR TECH CO., LTD


## 7 Device Management

### 7.1 Switch Working Mode

Set the device working mode to All-In-One Controller or Send-Only Controller.

Step 1 On the main menu screen, choose **System Settings > Working Mode**.

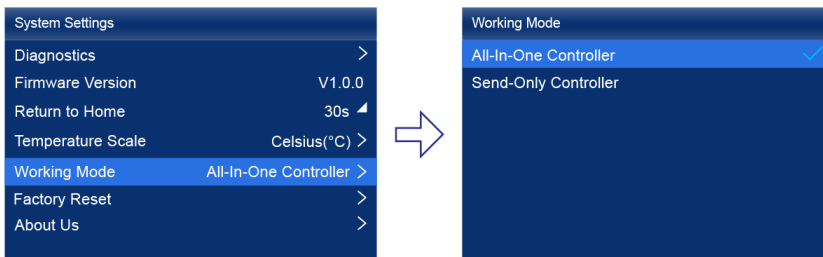Figure 7-1 Working mode



Step 2 Select **All-In-One Controller** or **Send-Only Controller**.


Step 3 Select **Yes** in the displayed dialog box.

### 7.2 Set a Backup Device

Specify a backup device for the current device so that the backup device can take over the primary device when it fails.

Step 1 On the main menu screen, choose **Advanced Functions > System Backup > Select Backup Device**.

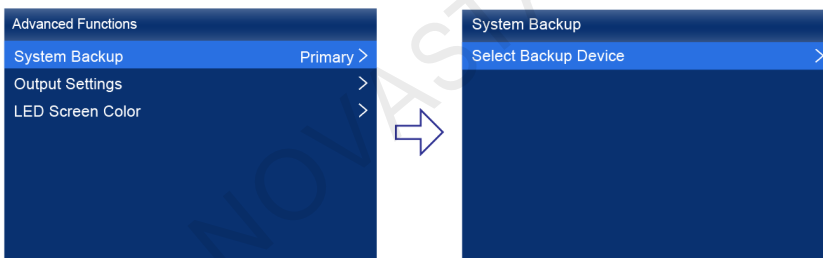Figure 7-2 System backup



Step 2 Select a device from the devices found.

Step 3 Select **Yes** in the displayed dialog box.

A prompt will be displayed after the operation is successful.

### 7.3 Configure Communication Settings


#### Set an IP Address

Manually set a static IP address for the device or set up the device to automatically obtain an IP address.

Step 1 On the main menu screen, choose **Communication Settings > Network Settings**.



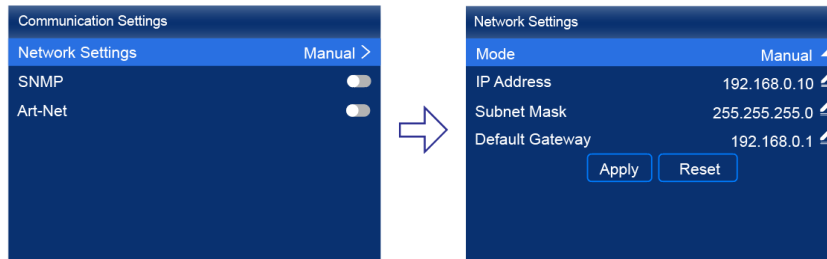Figure 7-3 Network settings



Step 2 Choose **Mode** and then select a mode from the drop-down options.

- Manual: Manually set a static IP address for the device.
- Auto: The device automatically obtains an IP address.


Step 3 If the manual mode is selected, set an **IP Address**, **Subnet Mask** and **Default Gateway** and select **Apply**. If the automatic mode is selected, this step is not required.

If you want to reset the IP address to the default, select **Reset**.

## Set the Protocol Switch

Set the SNMP and Art-Net protocol switch status.

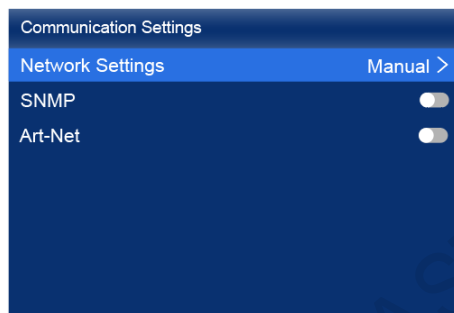Figure 7-4 Protocol switches



### Note


For details, see the *SNMP Protocol Instructions* and *Art-Net Protocol Instructions*.

## 7.4 Enable Mapping

After the Mapping function is enabled, cabinets can display some information, such as the Ethernet port number and receiving card number, allowing users to easily obtain the locations and connection topology of receiving cards.

Step 1 On the main menu screen, choose **Screen Configuration > Mapping**.

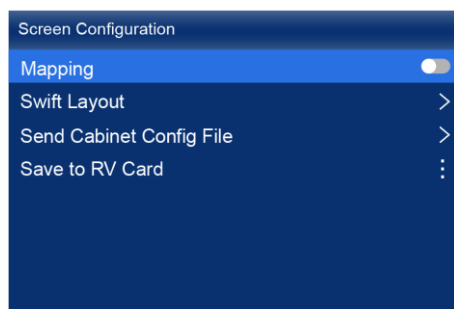Figure 7-5 Mapping




Step 2 Enable the Mapping function by toggling on this switch .

## 7.5 Control Display Status

Set the display loaded by the controller to a black screen or frozen status.

Step 1 On the main menu screen, choose **Display Control**.

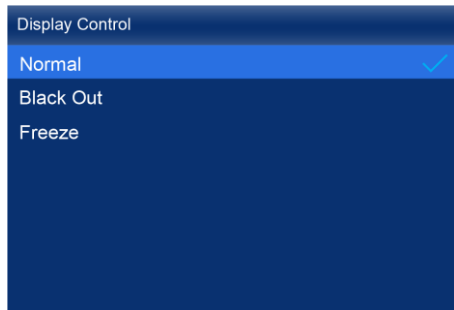Figure 7-6 Display control



Step 2 Select a display status as required.


- Normal: Display the normal output screen.
- Freeze: Make the output screen always display the current frame. The input source is played normally.
- Blackout: Make the output screen go black. The input source is played normally.

## 7.6 Diagnostics

Perform device diagnostics, then view and export the result.

Step 1 On the main menu screen, choose **System Settings > Diagnostics**.

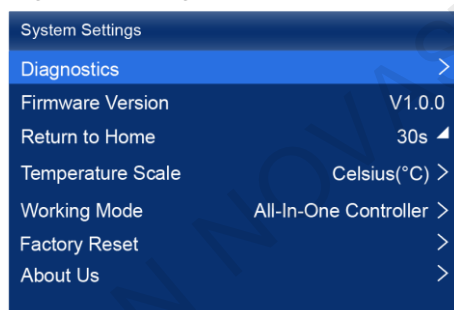Figure 7-7 Diagnostics




Step 2 Select **Yes** in the displayed dialog box.

After the diagnostics operation is complete, the diagnostic result will be displayed.

Step 3 Select **Close** to close the dialog box and the screen as shown in [Figure 7-8](#) is displayed.

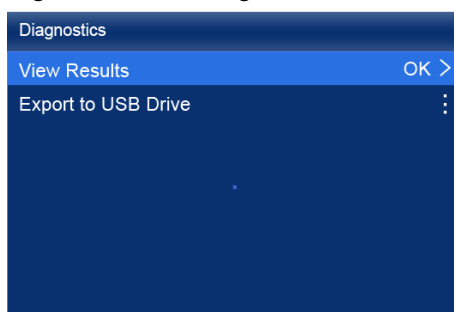Figure 7-8 After diagnostics



Step 4 Do any of the following as required.

- View the diagnostic results  
Select **View Results** to enter the report page and view the results.
- Export the diagnostic result to a USB drive
  - a. Insert the USB drive to the USB port on the front panel of the device.
  - b. Select **Export to USB Drive**.  
A prompt will be displayed after the operation is successful.


## 7.7 View the Firmware Version

View the current firmware program version of the device.

Step 1 On the main menu screen, select **System Settings**.

Step 2 View the current firmware program version next to **Firmware Version**.

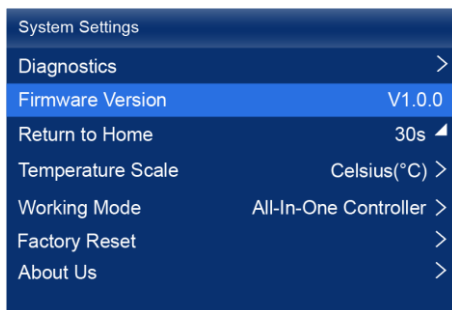Figure 7-9 Firmware version




## 7.8 Reset to Factory Settings

Reset part or all of the device data to the factory settings.

Step 1 On the main menu screen, choose **System Settings > Factory Reset**.

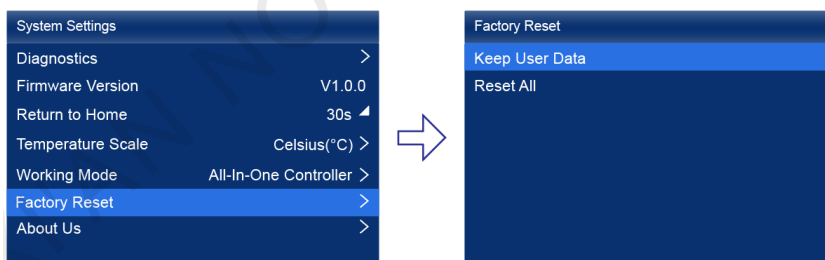Figure 7-10 Factory reset



Step 2 Do any of the following according to the data you want to reset.

- Reset part of the data  
Reset all the data except the imported files, network parameters, language settings, and device name.
  - a. Select **Keep User Data**.
  - b. Select **Yes** in the displayed dialog box.  
The device restarts automatically while the data is being reset.
- Reset all the data (This action cannot be undone.)  
Reset all the data to factory settings.
  - a. Select **Reset All**.
  - b. Select **Yes** in the displayed dialog box.

The device restarts automatically while the data is being reset.

XI'AN NOVASTAR TECH CO., LTD

## 8 Basic System Settings


### 8.1 Set Language

Change the system language of the device.

Step 1 On the main menu screen, select **语言/Language**.

Step 2 Choose **English** or **中文** as required.

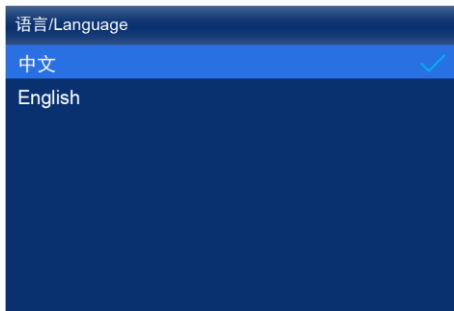Figure 8-1 Language




### 8.2 Set Session Timeout

Specify a certain amount of time for session timeout after which the LCD will return to the home screen from another screen automatically if no action is performed during the specified time.

Step 1 On the main menu screen, choose **System Settings > Return to Home**.

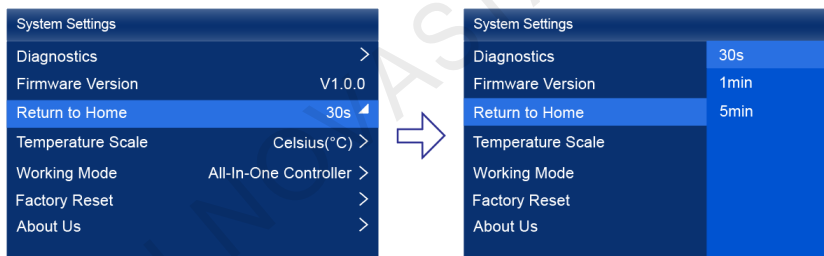Figure 8-2 Session timeout value



Step 2 Select **30s**, **1min** or **5min** from the drop-down options as required.


### 8.3 Set Temperature Scale

Change the system temperature scale of the device.

Step 1 On the main menu screen, choose **System Settings > Temperature Scale**.

Step 2 Select **Celsius(°C)** or **Fahrenheit(°F)** as needed.

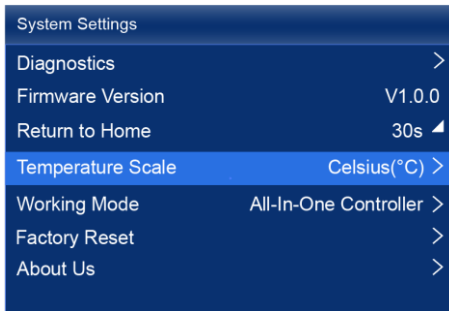Figure 8-3 Temperature scale




## 8.4 View Service Information

View the service information of NovaStar, allowing users to ask questions and give feedback.

Step 1 On the main menu screen, choose **System Settings > About Us**.

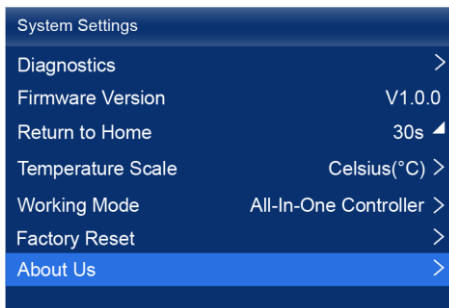Figure 8-4 About us



Step 2 View the official website, technical support email address and service hotline of NovaStar.

## 9 Product Specifications

Electrical Specifications	Power input	100-240V~, 50/60Hz, 2-0.8A
	Max power consumption	55 W
Operating Environment	Temperature	-20°C to +50°C
	Humidity	0% RH to 80% RH, non-condensing
Storage Environment	Temperature	-30°C to +80°C
	Humidity	0% RH to 95% RH, non-condensing
Physical Specifications	Dimensions	482.6 mm × 94.2 mm × 466.7 mm
	Net weight	7.2 kg
	Gross weight	10.2 kg Note: It is the total weight of the product, accessories, and packing materials packed according to the packing specifications.
Packing Information	Packing box	660.0 mm × 570.0 mm × 210.0 mm, kraft paper box
	Accessory box	408.0 mm × 290.0 mm × 50.0 mm, white cardboard box
	Accessories	<ul style="list-style-type: none"> <li>• 1x Power cord</li> <li>• 1x Ethernet cable</li> <li>• 1x HDMI cable</li> <li>• 1x DP cable</li> <li>• 1x Certificate of Approval</li> </ul>
IP Rating	IP20 Please prevent the product from water intrusion and do not wet or wash the product.	

The amount of power consumption may vary depending on various factors such as product settings, usage, and environment.

# 10 Video Source Specifications

Input	Bit Depth	Sampling Format	Max Input Resolution
HDMI 2.0-1	8bit	RGB 4:4:4	4096x2160@60Hz
		YCbCr 4:4:4	8192x1080@60Hz
		YCbCr 4:2:2	
	10bit	RGB 4:4:4	4096x2160@30Hz
		YCbCr 4:4:4	4096x1080@60Hz
		YCbCr 4:2:2	4096x2160@60Hz
HDMI 1.4-2	8bit	RGB 4:4:4	4096x1080@60Hz
		YCbCr 4:4:4	
		YCbCr 4:2:2	
	10bit	RGB 4:4:4	3840x1080@60Hz
		YCbCr 4:4:4	
		YCbCr 4:2:2	4096x1080@60Hz
DP 1.1	8bit	RGB 4:4:4	4096x1080@60Hz
		YCbCr 4:4:4	
		YCbCr 4:2:2	
	10bit	RGB 4:4:4	3840x1080@6Hz
		YCbCr 4:4:4	
		YCbCr 4:2:2	4096x1080@60Hz
3G-SDI	10bit	YCbCr 4:2:2	1920x1080@60Hz

## Note

The maximum resolution of HDMI and DP inputs in the table must be obtained by setting the graphics card.



# 11 Ethernet Port Load Capacity

## When Working with A10s Pro Receiving Card

The formula of calculating the load capacity per Ethernet port and the detailed parameters are as follows.

- 8bit: Load capacity  $\times 24 \times \text{Frame rate} < 1000 \times 1000 \times 1000 \times 0.95$
- 10bit: Load capacity  $\times 32 \times \text{Frame rate} < 1000 \times 1000 \times 1000 \times 0.95$

Max Load Capacity per Ethernet Port (Pixels)		
Frame Rate / Bit Depth	8bit	10bit
24 Hz	1,649,305.556	1,236,979
25 Hz	1,583,333	1,187,500
30 Hz	1,319,444	989,583
50 Hz	791,667	593,750
60 Hz	659,722	494,792
120 Hz	329,861	247,396
144 Hz	274,884	206,163
240 Hz	164,931	123,698

## When Working with Other Armor Series Receiving Cards

The formula of calculating the load capacity per Ethernet port and the detailed parameters are as follows.

- 8bit: Load capacity  $\times 24 \times \text{Frame rate} < 1000 \times 1000 \times 1000 \times 0.95$
- 10bit: Load capacity  $\times 48 \times \text{Frame rate} < 1000 \times 1000 \times 1000 \times 0.95$

Max Load Capacity per Ethernet Port (Pixels)		
Frame Rate / Bit Depth	8bit	10bit
24 Hz	1,649,305.556	824,653
25 Hz	1,583,333	791,667
30 Hz	1,319,444	659,722
50 Hz	791,667	395,833
60 Hz	659,722	329,861
120 Hz	329,861	164,931
144 Hz	274,884	137,442
240 Hz	164,931	82,465

**Copyright © 2023 Xi'an NovaStar Tech Co., Ltd. All Rights Reserved.**

No part of this document may be copied, reproduced, extracted or transmitted in any form or by any means without the prior written consent of Xi'an NovaStar Tech Co., Ltd.

#### **Trademark**

**NOVA STAR** is a trademark of Xi'an NovaStar Tech Co., Ltd.

#### **Statement**

Thank you for choosing NovaStar's product. This document is intended to help you understand and use the product. For accuracy and reliability, NovaStar may make improvements and/or changes to this document at any time and without notice. If you experience any problems in use or have any suggestions, please contact us via the contact information given in this document. We will do our best to solve any issues, as well as evaluate and implement any suggestions.

**Official website**  
[www.novastar.tech](http://www.novastar.tech)

**Technical support**  
[support@novastar.tech](mailto:support@novastar.tech)